


PRELIMINARY



QCI-S3-IG-01

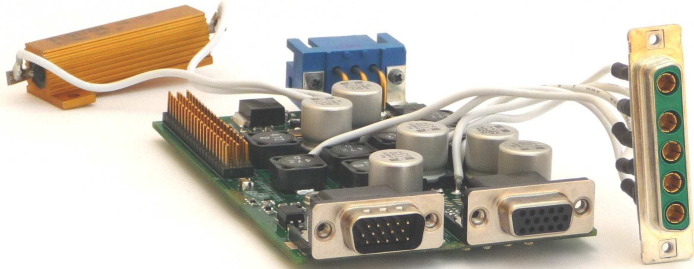

QCI-S3-IG

SilverSterling S3-IG

The SilverSterling™ is an OEM servo controller/driver for QuickSilver's line of NEMA 34 frame, high torque, direct drive servomotors, but is also capable of driving third party DC brush and voice coil motors. The SilverSterling controller/driver is available open framed (QCI-S3-IG-01) and enclosed (QCI-S3-IG) and designed to servo QCI's I-Grade motors through an encoder connector and a high current motor drive connector.

The SilverSterling features a 15 pin interface connector including 4 IO, CAN , RS-485, and system power input. Four IO lines are brought out to the 15 pin connector. These may be selected by means of jumpers on the 60 pin header if a secondary mezzanine PCB is not utilized. If the expansion PCB is used, then these connector pins are free to be used by the customer as assigned by the expansion PCB design.

The SilverSterling also features a 60 pin header to allow simple and direct connection to expansion boards for both future QuickSilver product extensions and OEM custom interface printed circuit boards, eliminating the need for an additional cable and housing.

The 60 pin expansion header includes the ability to bring power to the board as well as access to internal +12v, +5v, and +3.3v power supplies. Access is also provided to two SPI ports (one of which may alternately be used as 4 simple IO), the internal CAN port, 4 configurable analog/digital IO (12 bit A/D), one I2C port (which may be alternately used as 2 IO), A secondary serial port (or alternately 3 I/O), motor encoder signals, one Capture Input (which can also serve as general purpose IO) and an additional 11 general purpose IO. Four connections to the 15 pin control connector are also brought out to the interface connector.

Drive capability is two or three phase at 10A RMS / 20A peak. DC Drive capability is 20A (using both output phases connected in parallel).

System Overview

Point-to-Point Moves

- Relative or Absolute
- Velocity or Time Based
- S-Curve

Advanced Motion Profile Moves

- Profile Move Commands
- Register Based
 - Position/Accel/Decel/Vel
 - Modify On-the-Fly

Multi-Axis Linear Interpolation

- XYZ Coords Contained in Text File
- CANopen® used for local bus
- 1000+ Points Stored In NV Memory

Built-In Voltage Clamp

- Regenerative Braking Resistor

Program and Data Storage

- 32K Non-Volatile Memory:
- 2000-3000 Program Lines
- User Data Examples
 - CAM Tables
 - Motion Profiles
 - Lookup Tables

Electronic Slip Clutch/Brake

- Variable Torque
- Wind/Unwind Applications

Anti-Hunt™

- Optionally use Open Loop While Holding
- No Servo Dither While At Rest

Communications

- RS-485 @ up to 230K Baud
- ASCII, Binary, Modbus®, DMX512
- Host Control While Servo in Motion
- CANopen® (Rev 03 SW and higher)

Programming Language

- Easy, Menu Driven Interface
- Command Parameter Prompts
- No Syntax Errors
- User Namable I/O and Registers

Advance PVIA™ Servo Loop

- 100:1 Inertial Mismatch
- Direct Drive Oversized Inertial Loads
 - Flywheels/Belt Drives
 - Typically Without Gearheads
- More Stable Than PID

Digital 4 Quadrant Vector Drive

- DSP Driven for Reduced Noise

Multi-Task/Multi-Thread

Compatible with QCI Motor/Encoders

- NEMA 11 Frame
 - 4000 Counts/Rev Encoder
 - Up To 9 oz-in (continuous)
- NEMA 17 Frame
 - 8000 Counts/Rev Encoder
 - Up To 43 oz-in (continuous)
 - IP50 or IP65
- NEMA 23 Frame
 - 8000 Counts/Rev Encoder
 - Up To 300 oz-in (continuous)
 - IP50 or IP65

Electrical Specifications

Input Power

Voltage

+12 VDC to +48 VDC, regulated. Device must be initialized for the actual operating voltage.

Reverse Polarity Protection

Reverse polarity protection is available on the SilverSterling. (Note, however, if power supply is not floating, connecting the V+ input to Ground will cause this potential to be present at the common connection to communications and I/O lines, which may damage these lines or that to which they are connected.

Input Current

20 Amps maximum for any input voltage, +12 VDC to +48 VDC.

Output Power

Output/Driver Current

20 Amp peak, 10A RMS x 2 phases; 20 A maximum for DC motors (using both phases in parallel).

* With Adequate Heat Sink. (10A RMS x 2 phases typical TBD rise from 22C, ambient, TBD RMS x 2 typical TBD C rise from 22C , using QCI-S3-IG heatsink with mounting feet horizontal, still air; Vertical orientation typically several degrees lower. Measurement on outside of heatsink, adjacent to driver.)

Maximum Output Power

TBD Watts continuous power with adequate heat dissipation, 48V operation.

NOTE: A34HC-x motors may be driven to approximately 90% rated torque by this drive. A34H-1, A34N-x and A34KH-1 may be driven to 100% rating by this drive.

Encoder Interface

Designed to work with QCI's I-Grade motor/encoders. Quadrature differential signals are employed. Quadrature decoding used (i.e 2000 lines are decoded as 8000 counts.) Standard interface is 485 differential inputs.

Inputs & Outputs

Digital Inputs

0 to +3.3 VDC. LVTTTL level compatible.

On externally connected IO: Effective internal ~200K ohm pull-up impedance to +3.3 V. Inputs have a series 220 ohm / 3.3v protector to ground / Series 220 ohm ESD protection network.

Do not exceed 5v on the inputs to prevent damage to the controller.

Internal IO present at header do not have additional protection; user must provide protection needed on expansion PCB.

Drive Enable inputs are optically isolated and require 6v minimum input 3 ma. Current limited supply voltage connections are provided adjacent to the drive enable pins to provide a convenient source of power for the drive enable when external switching is not required.

Digital Output Voltage

0 / +3.3 VDC.

Digital Output Current

Sinking or Sourcing

2mA; (externally connected IO include a 440 series impedance).

Analog Inputs

0 to +3.3 VDC input signal range.

12 bit ADC resolution (single).

Analog signals are read every servo cycle (120 μ sec.) and the converted analog data is processed through a 5 ms filter to reduce noise & transients.

Mezzanine Connector

A 60 pin mezzanine connector has been provided to allow for easy interface to a user specific printed circuit board. Note that the signals on this connector are not protected, and the user must add protection to their circuit board for signals used. If the mezzanine board is not used, pins 20C-20B, 19C-19B, 18C-18B, 17C-17B must be jumpered to access IO1-IO4 at the DB-15HD SIP connector. (These signals must be connected on the mezzanine board if these functions are wanted at the four IO pins, otherwise other functions can be routed to the four external connections. Note the slight differences in pin usage between the QCI-S3-IG and the QCI-S2-IG if designing a board for both systems.

Clamp Resistor

The QCI-S3 comes with a built in regenerative voltage clamping circuit to prevent damage to the driver from regenerated power associated with stopping a load. The QCI-S3-IG-01 has this clamping resistor attached. An external clamp resistor may be connected via the 6 pin power connector. The standard cable has the internal clamp resistor connected to the clamp circuit. The external clamp resistor should be tied between the Drive Voltage pin and the Clamp pin. The user is responsible for affixing the clamping resistor to a suitable heatsink when using an external clamp resistor, or when using the internal clamp resistor with the QCI-S3-IG-01.

Communications

Serial Interface

RS-485 multi-drop, Reduced unit load accommodates up to 255 nodes.
Protected up to +/- 70v not operating, +/-30V operating.

Note: RS-485 requires a nominal 120 ohm ½ W termination resistor at each end of the network. This termination is not provided onboard and must be provided by the user. (Note: very short networks may be able to operate without termination, according to the maximum speed desired.)

Protocols

8-bit ASCII, 9-bit binary, Modbus®, and DMX512

Hardware Configuration Settings

Available Baud Rates: 2400, 4800, 9600, 19.2k, 28.8k, 57.6k, 115.2k or 230.4k
(250k only for DMX512)
Data Bits: 8 (9 bits for binary)
Stop Bits: 1.5 or 2
Parity Bit: None (Modbus supports None, Even, Odd)

CAN interface

The CAN bus connection is NOT isolated, but does include transceivers which have an extended +/- 80v fault protection range. The CANopen® communications protocol allows the unit to function as a master, slave, or peer on a CANopen network. See the SilverLode CANopen User Manual for details on the CANopen protocol. This protocol operates simultaneously and independently from the standard serial protocols.

Note that a 120 ohm ½ W termination resistor is required at each end of the CAN network (only two per system). This termination is not provided onboard the controller and must be provided by the user, even for very small networks.

CANopen® and CiA® are registered community trade marks of CAN in Automation e.V.

STATUS LIGHTS

Three status lights are provided on each end of the box. Two sets of status lights are provided to make it easier to see them with the box mounted in different orientations. The Blue Power light indicates power is connected to the unit. The Red COMM LED indicates the unit is ready (no program running) by a dim level, it is off between communications if a program is running. It blinks brightly during each incoming communications frame. The Green Status light varies in intensity with the motor torque; if Done Bit is configured the LED lights to indicate Done (See Set Done Bit command), is also used to blink error codes if a fault is detected (and the Done bit is not configured). A Green Drive Enable LED indicates the drive enable input is active.

Environmental Specifications

Operational Temperature

-10 C to +80 C

Storage Temperature

- 40 C to +85 C

Humidity

Continuous specification is 95% RH non-condensing.

Shock

Limitation is approximately 50g/11ms.


Specifications subject to change without notice. See www.QuickSilverControls.com for current information.

Mounting the QCI-S3-IG-01


The Controller Driver is designed to be mounted between guides that support the edges of the PCB not having LEDs or connectors. The guides should not overlap more than .025 over the edge of the PCB. The driver IC is the tallest device on the back side of the board and defines the distance between the PCB and the heat sink. Four 4-40 nuts are positioned equally about and on the center line of each driver to allow access from the outside of the heatsink to pull the PCB tight to the heatsink. The connector plane of the motor and SIP connectors is the reference for alignment and the stabilizer for the connector end of the PCB.

Proper ESD handling techniques including grounding straps should be used while handling the open frame printed circuit board to prevent damage. The 15 pin D-sub shells are grounded and should be the first contact to the PCB as an added measure. The Motor Power D-sub (5W5) shell should be grounded to the chassis and returned to the power ground.

Mechanical Dimensions
QCI-S3-IG

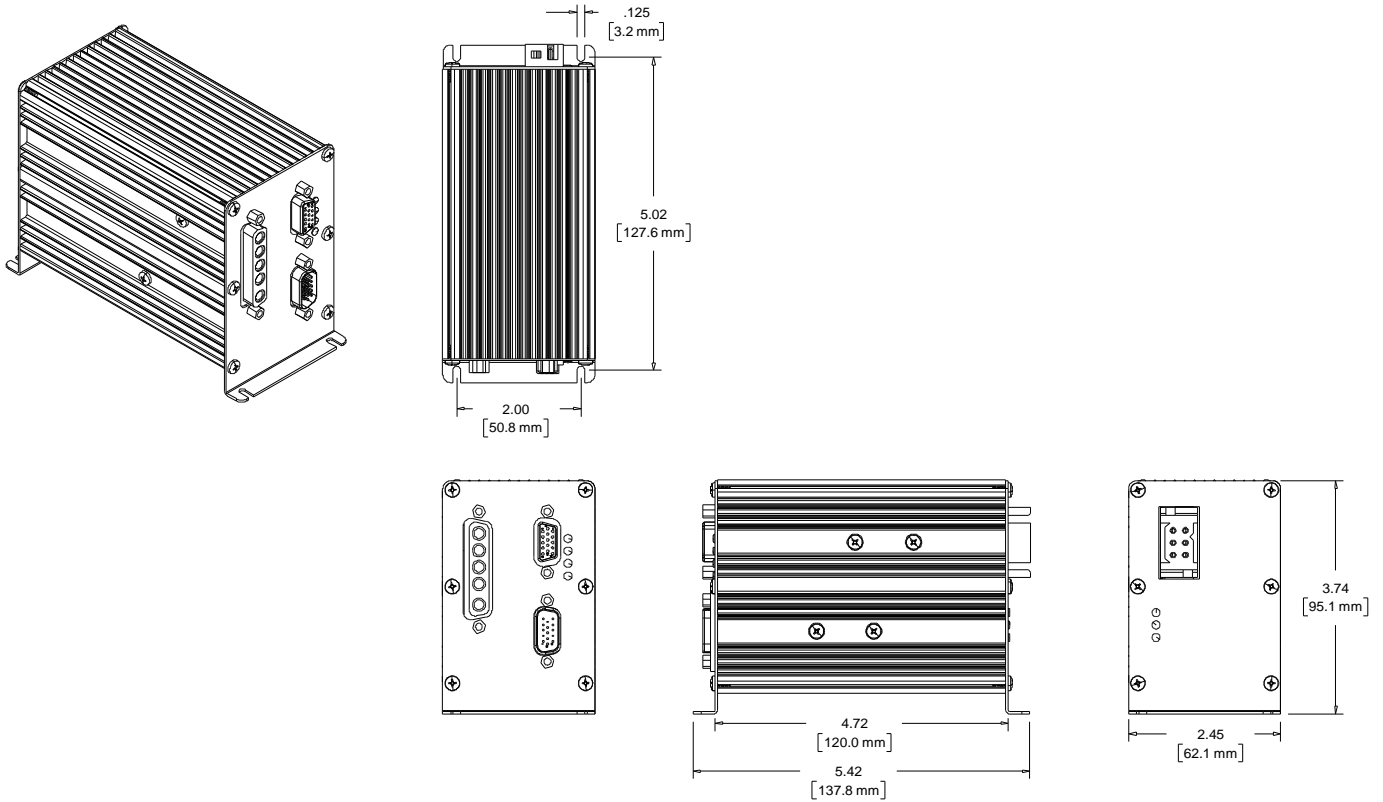


QCI-S3-IG-01

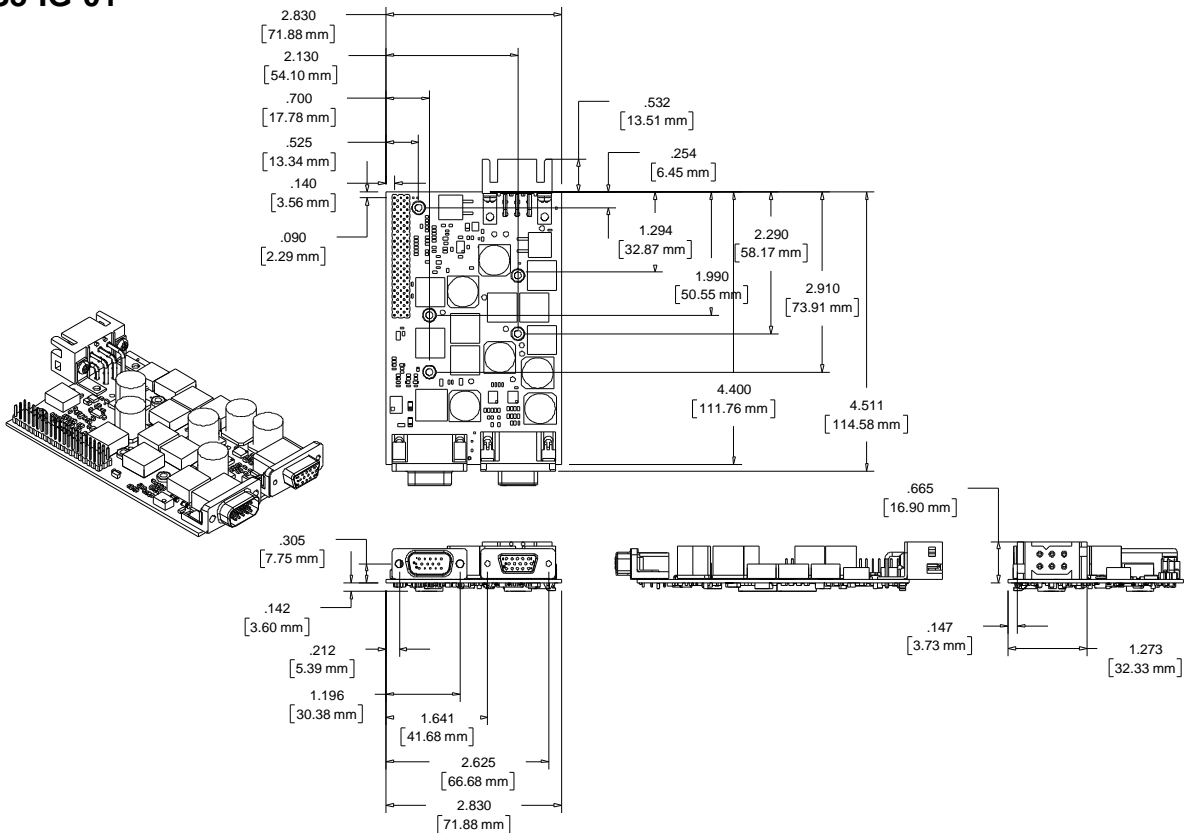

Connector Data

SilverSterling Interface Port (SIP)


This port provides Power, RS-485 serial communications, CAN communications, and four IO. It is not backwards compatible with the SilverDust or SilverNugget. The IO is nominally 0-3.3v and should be limited to no more than 5v to avoid damage. The CAN and RS485 have extended input voltage range to improve robustness. Power ground and logic ground are internally connected. The Drive Enable is optically isolated and current limited to 3mA with an input voltage of 6v to 50v. Drive Ena Source provides a 3mA current limited power source that can be connected to Drive Enable +, with Drive Enable – connected to Power Ground to minimize wiring when the drive is to be enabled whenever driver power is present. The QCI-BO-S1 connects the drive enable to the Drive enable source via the power and ground connections. No power needs to be connected for the drive enable to function.

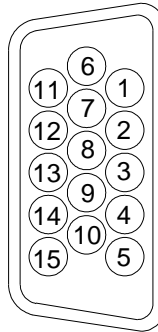

1	DR_ENA+
2	RS-485A
3	+5V OUTPUT 100mA
4	I/O #3
5	CAN_H
6	DR_ENA -
7	DR_ENA SOURCE
8	LOGIC GROUND
9	I/O #2
10	LOGIC GND (CAN GND)
11	POWER GROUND
12	RS-485B
13	I/O #1
14	I/O #4
15	CAN_L

Encoder Interface


QuickSilver Controls recommends our QCI-C-D15P-D15S-nn (nn=length in feet) cable to interface between the motor encoder and the controller.

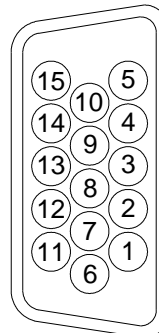

1	
2	Chassis Ground
3	+ 5V Encoder Power
4	Encoder A -
5	Encoder B -
6	
7	
8	Encoder Z +
9	Encoder A +
10	Encoder Z -
11	
12	Chassis Ground
13	Encoder B+
14	Encoder Ground
15	Motor Memory Access


Motor Driver Interface

QuickSilver Controls recommends our QCI-C-D5P-D5S-nn (nn=length in feet) cable to interface between the motor and the controller.

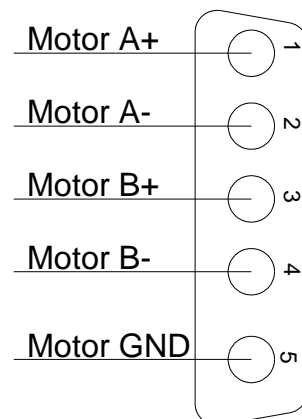


Power Connector

The power connector supplies driver power (12 to 48v) to V+ with Power Ground as the return. Optionally, the processor may be powered (12v-48v) via the V+ processor input, allowing the processor to stay alive when the drive power is removed. The Clamp Out pin (open drain to ground) needs to be connected either to the internal clamp resistor RES-, or to an external, user supplied clamp resistor with the opposite side of the user clamp resistor tied to +Vdriver. Connecting Clamp Out directly to +Vdriver will likely result in damage to the board.

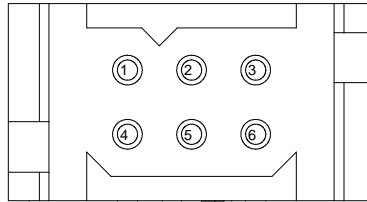

1	RES-
2	Clamp Out
3	+Vdriver (internal)
4	Power Ground
5	V+ Processor
6	V+

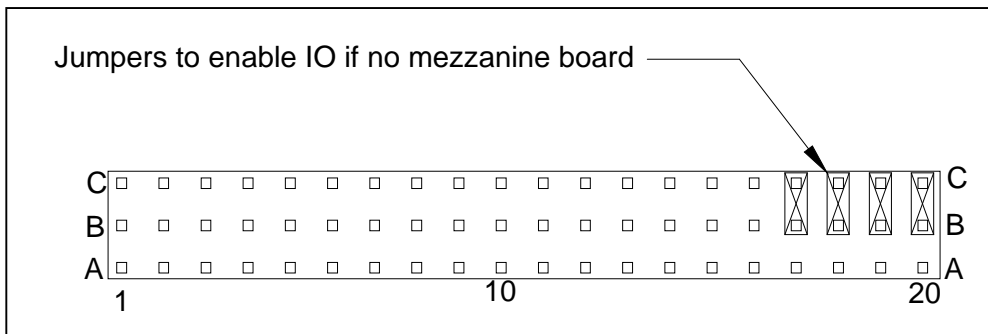

Mezzanine Header

The Mezzanine Header provides access to additional signals when adding a customer feature board to the S3-IG

(Contact factory for custom boards added to box), or S3-IG-01.

Four jumpers come standard on the S3-IG to connect the external IO (after input protection network) to the internal IO on the processor. Note that the signals on this connector are not protected and the user must add protection as needed to their customization board in order to use these signals.

Mezzanine Connector Pinout. Contact factory to use additional IO

	A	B	C
1	No Connect *** (VP on S2-IG)	No connect *** VPsen on S2-Ig	RxD_A - Primary serial port
2	+VDr = Internal driver voltage	+VDr = Internal driver voltage	TxD_A - Primary serial port
3	Power Ground (0v)	Power Ground (0v)	DE_A - Primary serial port
4	+12v @ 10mA	+5v @ 100mA	RxD_A ENA* (low to disable internal 485)
5	SPIA Slave In Master Out	TRST - RESERVED	SPIB Slave In Master Out or IO
6	SPIA Slave Out Master In	TDI - RED*	SPIB Slave Out Master In or IO
7	SPIA Clock	TDO - GREEN*	SPIB Clock or IO
8	SPIA Chip Select*	TMS - Output only	SPIB Chip Select* or IO
9	CSO A - Additional Chip select	+3.3v @ 100mA	RxD_B - Secondary serial port or IO
10	CAN TX (internal signal)	TCLK - Reserved	TxD_B - Secondary serial port or IO
11	CAN RX (Internal signal)	SDAA - I2C or IO	DE_B - Secondary serial port or IO
12	Digital Ground	SCLA - I2C or IO	ENC_A - buffered from motor encoder
13	ADCINA2 - Digital IO or Analog	Digital Ground	ENC_B - buffered from motor encoder
14	ADCINB2 - Digital IO or Analog	GPIO1	ENC_Z - buffered from motor encoder
15	ADCINA4 - Digital IO or Analog	GPIO3	ENC_S - high speed capture of encoder or IO
16	ADCINB4 - Digital IO or Analog	GPIO14	CAP_1 - High speed capture or IO
17	No Connect	Internal IO4	To SIP pin 14 via protection network, ADC1 via protection network
18	No Connect	Internal IO1	To SIP pin 13 via protection network
19	+ Vprocessor *** (3.3v Ref S2-IG)	Internal IO3	To SIP pin 4 via protection network
20	DRIVE ENABLE (pull low to disable)	Internal IO2	To SIP pin 9 via protection network

*** Different between S2-IG and S3-IG

Recommended Components

SilverSterling S3-IG Start-Up Kit

For first time users, QCI recommends purchasing a SilverSterling Start-Up Kit

The QCI-S3SB Start-Up Kit includes:

- Electronic copy of QuickControl® Software, Manual and Command Reference (QCI-EMAN)
- 4' DB15HD Motor I/F Cable (QCI-C-D15P-D15S-04)
- 4' DB5 Motor Power Cable (QCI-C-D5P-D5S-04)
- Breakout Module for SilverSterling (QCI-BO-S1)
- USB to RS485 converter (QCI-USB-RS485)
- 4' S3 power cable (QCD-S3-P-04)

The QCI-S3SBP adds

- 1000W, +48V Power Supply (SE-1000-48)
- Line Power Cable (QCI-C-ACP-FLY-6)


To get started you will need:

1. SilverSterling S3-IG controller/driver
2. Start-Up kit (QCI-SSB or QCI-SSBP)
3. +12 to 48V Power Supply, if ordering the QCI-SSB
4. Motor/Encoder

See technical document QCI-TD074 on our website for details.

The Standard System detailed below uses the QCI-S3SBP Start-Up Kit.

SilverSterling S3-IG System

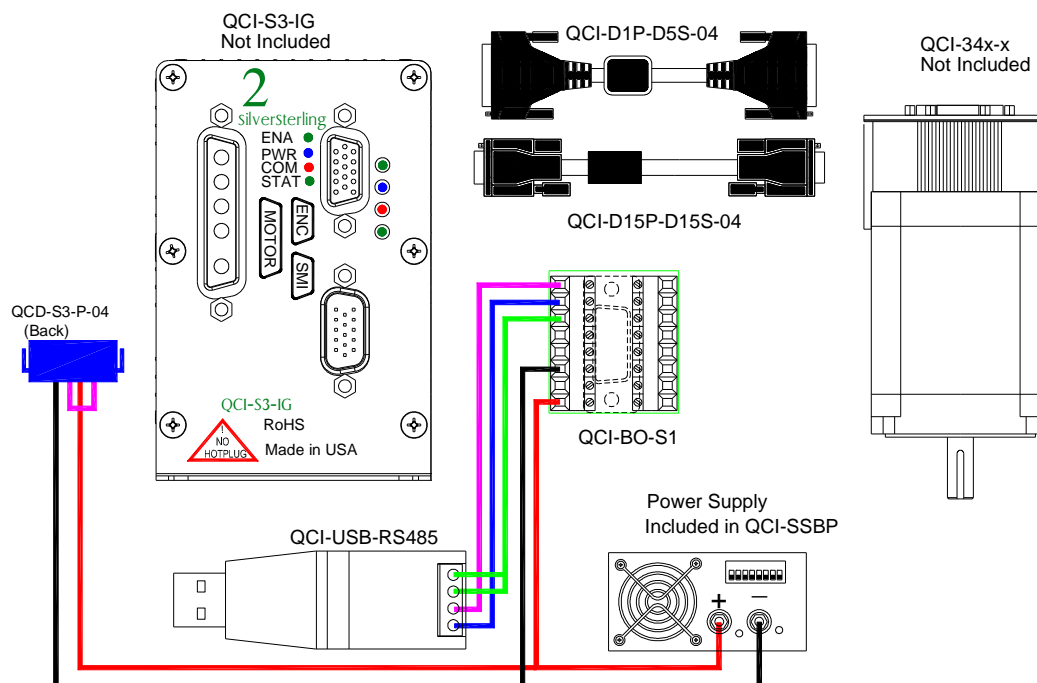

1. Controller/Driver

SilverSterling S3-IG (QCI-S3-IG) is our standard closed frame controller/driver designed to servo QCI's larger I-Grade motors through two connectors.

2. Basic Breakout (QCI-BO-S1)

QCI recommends purchasing a breakout to simplify wiring power, RS-485 communication, CAN and 4 I/O. The breakouts connect directly to the SilverSterling's 15-pin interface port (SIP).

3. Encoder I/F Cable

For standard system, this D-sub type cable goes between the motor and the controller. The generic part number is QCI-C-D15P-D15S-nn. Replace the last two digits "nn" with length of cable in feet (i.e. -10 for 10 feet). Standard lengths are 1, 2, 4, and 10 feet.

For IP65 system, a special IP65 cable goes in between the motor and the controller. The motors and cables are IP65, but not the controller/driver. The generic part number is QCI-C-D15P-T14S-nn. Replace the last two digits "nn" with length of cable in feet (i.e. -10 for 10 feet).

4. Motor Drive Cable

For standard system, this D-sub type cable goes between the motor and the controller. The generic part number is QCI-C-D1P-D1S-nn. Replace the last two digits "nn" with length of cable in feet (i.e. -10 for 10 feet). Standard lengths are 1, 2, 4, and 10 feet.

For IP65 system, a special IP65 cable goes in between the motor and the controller. The motors and cables are IP65, but not the controller/driver. The generic part number is QCI-C-D5P-T6Snn. Replace the last two digits "nn" with length of cable in feet (i.e. -10 for 10 feet).

5. Input power cable

The Power cable connects to the 6 pin power connector on the QCI-S3-IGxx. It carries driver power and connects the internal clamp resistor. The part number is QCD-S3-P-04 for a 4 foot cable. Other configurations including connections for external clamp resistor and for separate processor power can be ordered from the factory. The part number for the connector with 6 pins and no wires is QCD-S3-P.

6. Motor

The SilverSterling S3 is capable of driving high power NEMA 34 I-Grade motor/encoder. See the following datasheet for more information:

QCI-DS009_QCI-A34 - 34 Frame Motors.

7. Power Supply

Power supply selection is motor dependent, but the following will work with all high power (two connector) 34 Frame motors.

SE-1000-48 (48V, 20.7A, 1000 Watt)

Part Numbers

silverSterling™ IG Controller/Drivers		
Driver	Controller	Options
<p>QCI-S3-IG:</p> <ul style="list-style-type: none"> • Best paired with I-Grade Motor/Encoders • 10A RMS per phase • 20A peak per phase • 20A @ 12v-48v • Included Clamp circuit and resistor. • Isolated Drive Enable input 	<p>IG – SilverSterling S3 IG</p> <ul style="list-style-type: none"> • 4 TTL Inputs or Outputs • 1 Analog input • 1 PWM output • ASCII, 9 bit Binary, Modbus®, DMX-512® • CANopen® (with Rev 03 sw) • DB15HD (pin): SIP Connector • DB15HD (socket): Motor I/F • DB5W5 (socket): Motor Power • 6 pin Input power Connector 	<p>Blank – in Heat Sink Enclosure</p> <p>01 – Board Only</p> <ul style="list-style-type: none"> • Requires user to properly heat sink. <p>B – Special for use with 3rd party linear actuators having analog feedback.</p>
Example: For IG board only		
QCI-S3	IG	01
Selection creates part number: QCI-S2-IG-01		

Example Part Numbers:

- QCI-S3-IG
- QCI-S3-IG-01
- QCI-S3-IG-B
- QCI-S3-IG-B1

Contact Information

QuickSilver Controls, Inc.
 712 Arrow Grand Circle
 Covina, CA 91722
 (626) 384-4760 or (888) 660-3801
 (626) 384-4761 FAX
www.QuickSilverControls.com